



PLR-40 PARTS LIST

KEY NO	PARTS NO	PARTS NAME	KEY NO	PARTS NO	PARTS NAME
100	21004172	MAIN BODY	612-1	26120054	KEY WASHER
102	21020002	BUSHING	612-2	26120007	KEY WASHER
102-1	21020004	BUSHING	700	27000322	DRIVE GEAR
105	21050027	PINION BEARING FIXED PLATE	702	27020822	PINION GEAR
105-1	21050036	PINION BEARING FIXED BUSHING	705	27050105	TRANSMISSION GEAR
108	21081351	CAP	708	27080095	OSCILLATING SLIDER
200	22004404	SIDE PLATE	716	27160007	OSCILLATION SLIDER PLATE
201	22010630	SIDE PLATE DECORATION	718	27180704	MAIN SHAFT
201-1	22010631	MAIN BODY DECORATION	719	27190025	CLICK GEAR
201-2	22010029	SIDE PLATE DECORATION	722	27220009	CLICK GEAR WASHER
201-3	22010031	MAIN BODY DECORATION	725	27250020	TRANSMISSION GEAR BUSHING
300	23004740	ROTOR	800	28000241	ANTI-REVERSE/ANTI-RE LEVER
301	23011776	BAIL ARM	800-1	28000322	ANTI-REVERSE/ANTI-RE LEVER
304	23042509	BAIL ARM COVER	801	28010024	ANTI-RE LEVER SPRING
305	23050146	KICK LEVER	0910495	0910495	BALL BEARING
306	23060956	BAIL HOLDER COVER	0910049	0910049	BALL BEARING
307	23071462	BAIL HOLDER	0920540	0920540	WASHER
309	23090002	BAIL ARM SLIDER	0920376	0920376	WASHER
310	23100005	COMPRESSION SPRING	0920154	0920154	WASHER
313	23131452	BAIL WIRE ASSY.	0930044	0930044	SCREW
315	23150010	LINE ROLLER	0930575	0930575	SCREW
316	23160002	LINE ROLLER BUSHING	0930171	0930171	SCREW
318	23180005	ROTOR NUT	09301252	09301252	SCREW
400	240014998	SPOOL ASSY.	0930209	0930209	SCREW
405	24050042	DRAG WASHER RETAINER	0930055	0930055	SCREW
407	24070009	EXTENSION SPRING	0930471	0930471	SCREW
500	25009984	HANDLE ASSY.	0930544	0930544	SCREW
504	25040004	HANDLE SCREW CAP WASHER	09301265	09301265	SCREW
513	25130788	HANDLE CAP	0930643	0930643	SCREW
600	26002816	DRAG KNOB ASSY.	0930964	0930964	SCREW
610	26100015	DRAG WASHER	0930838	0930838	SCREW
611	26110005	EARED WASHER	0930639	0930639	SCREW
612	26120006	KEY WASHER			