



SFR-10 PARTS LIST

KEY NO	PARTS NO	PARTS NAME	KEY NO	PARTS NO	PARTS NAME
100	21003942	MAIN BODY	612-4	26120032	KEY WASHER
105	21050012	PINION BEARING FIXED BUSHING	700	27000420	DRIVE GEAR
105-1	21056616	PINION BEARING FIXED PLATE	702	27020448	PIN GEAR
108	21081443	CAP	705	27050153	TRANSMISSION GEAR
118	21180030	MAIN BODY RAMP	705-1	27050155	TRANSMISSION GEAR
200	22003334	SIDE PLATE	708	27080130	OSCILLATING SLIDER
201	22010391	MAIN BODY DECORATION	716	27160026	OSCILLATION SLIDER PLATE
201-1	22010392	SIDE PLATE DECORATION	718	27180727	MAIN SHAFT
201-2	22010335	MAIN BODY DECORATION	719	27190025	CLICK GEAR
201-3	22010337	SIDE PLATE DECORATION	722	27220009	CLICK GEAR WASHER
300	23004827	ROTOR	725	27250028	TRANSMISSION GEAR BUSHING
301	23011919	BAIL ARM	800	28000333	ANTI-REVERSE/ANTI-RE LEVER
304	23042584	BAIL ARM COVER	800-1	28000402	ANTI-REVERSE/ANTI-RE LEVER
305	23050162	KICK LEVER	801	28010024	ANTI-RE LEVER SPRING
306	23060992	BAIL HOLDER COVER	0910618	0910618	BALL BEARING
307	23071519	BAIL HOLDER	0910049	0910049	BALL BEARING
309	23090033	BAIL ARM SLIDER	0910039	0910039	BALL BEARING
310	23100060	COMPRESSION SPRING	0910335	0910335	BALL BEARING
313	23131524	BAIL WIRE ASSY.	0920386	0920386	WASHER
315	23150052	LINE ROLLER	0920388	0920388	WASHER
316	23160010	LINE ROLLER BUSHING	0920540	0920540	WASHER
317	23170024	LINE ROLLER WASHER	0930541	0930541	SCREW
317-1	23170014	LINE ROLLER WASHER	09301326	09301326	SCREW
318	23180019	ROTOR NUT	0930307	0930307	SCREW
400	240014253	SPOOL ASSY.	0930928	0930928	SCREW
405	24050042	DRAG WASHER RETAINER	0930060	0930060	SCREW
407	24070009	EXTENSION SPRING	09301327	09301327	SCREW
500	25005620	HANDLE ASSY.	0930544	0930544	SCREW
504	25040004	HANDLE SCREW CAP WASHER	09301262	09301262	SCREW
513	25130816	HANDLE CAP	09301450	09301450	SCREW
600	26003168	DRAG KNOB ASSY.	0930431	0930431	SCREW
610	26100015	DRAG WASHER	0930433	0930433	SCREW
612	26120006	KEY WASHER	0930830	0930830	SCREW
612-1	26120054	KEY WASHER			